



## Remeha Avanta Plus 28c / 35c / 39c / 24s

### 2. Disable boiler without frost protection, during longer periods of non-use

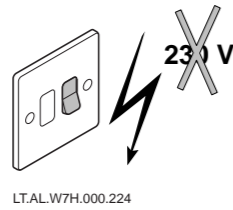

- Switch off the boiler.

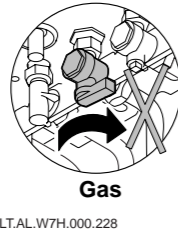


- Turn off the boiler gas tap.


#### Drain boiler

Drain the boiler and central heating system if you will not be using the home for a long period and there is a chance of night frost.

## 5 ENABLING THE BOILER

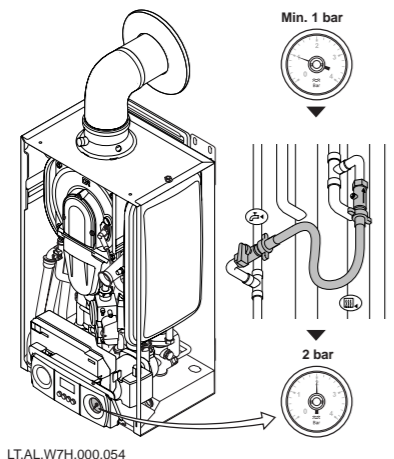

- Check the boiler water pressure. If the water pressure is less than 1 bar, the system has to be topped up with water.

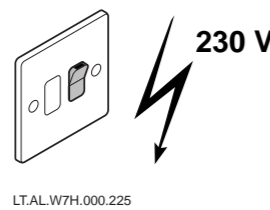

- Switch on the boiler at the fused spur unit; the boiler will run the start-up program.


- A display test will briefly appear showing all segments of the display.

software version;  
 parameter version;


- A venting cycle of 2 minutes now follows, the version numbers will be displayed alternately;

- Next, the following will appear in the display;

- ; boiler is ventilating;
- ; boiler is igniting;
- ; boiler is operating for DHW;
- ; boiler pump is running after heating DHW;
- ; boiler is stand-by.

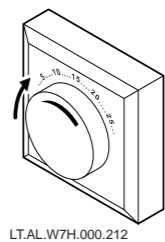

- Set the room thermostat to the desired room temperature.

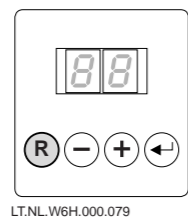

The boiler will now automatically start operating.

## SHORT USER GUIDE

### 1 SAFETY

#### Can you smell gas? What to do:

- Do not smoke and do not create any flame or sparks.
- Do not use any electric switches.
- Turn off the main gas stop cock.
- Open windows and doors.
- Warn those present and leave the building together.
- Call your gas suppliers / installer once you are outside the building, TRANSCO tel. 0800 111 999.

#### Installation location for the boiler!

- Do not store or use any flammable materials, aggressive substance and/or aerosols near the boiler.
- The installation area must be frost-free.
- The switched spur unit for the boiler must always be accessible.

#### Can you smell smoke or flue gases? What to do:

- Switch off the boiler.
- Open windows and doors.
- Warn those present and leave the building together.
- Call your installer once you are outside the building.

#### Water and pipe temperatures!

- The factory setting for the tap water temperature is 55°C; this temperature can be set to 65°C.
- The maximum water temperature in the Avanta Plus can reach 90°C. This means that pipes and/or radiators can reach this temperature.
- If the boiler is running, the flue duct can reach a high temperature.

### 2 PROBLEMS WITH BOILER AND/OR CENTRAL HEATING SYSTEM

#### Error codes – errors which can be resolved by the user

 
<p> E1 / E2 E7 / E10</p>	<p> Check water pressure: water pressure is greater or equal to 1 bar.</p> <p>Press R-key</p>	<p> Wait for recovery; display shows , boiler functions properly.</p>	<p>Or</p> <p> Display shows  again; note down the error code and boiler type and call your installer</p>
<p> E4</p>	<p> Check water pressure: water pressure is greater or equal to 1 bar.</p> <p>Top up your central heating system</p> <p>Press R-key</p>	<p> Wait for recovery; display shows , boiler functions properly.</p>	<p>Or</p> <p> Display shows E4 again; note down the error code and boiler type and call your installer.</p>

LT.NL.W6H.000.114 + LT.NL.W6H.000.115 + LT.NL.W6H.000.116 + LT.AL.W7H.000.235 + LT.NL.W6H.000.118  
LT.AL.W7H.000.230 + LT.NL.W6H.000.121 + LT.NL.W6H.000.122

#### Error codes – errors which have to be remedied by the installer


If the display indicates a different error code from that described above, note down the error code and boiler type and call your installer. Contact your installer also in the event of a water leak.

112951-0406



112951

3 CHANGING BOILER SETTINGS

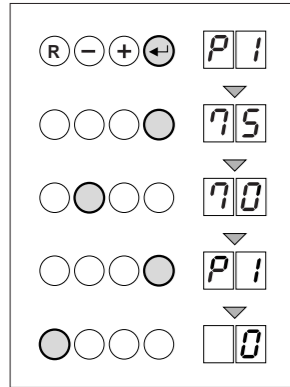


LT.NL.W6H.000.070

1. Changing P1 setting: flow temperature of water in central heating system

Reduce the flow temperature as follows:

- Press 'Enter'- key until codes P and 1 are displayed alternately.
- Press 'Enter'- key again; set value for maximum flow temperature is displayed: 75°C (factory setting).
- Press [+]-key to change this value, for example to 70°C.
- Press 'Enter'- key to confirm value; codes P and 1 are displayed alternately.
- Press 'Reset'- key to switch boiler to operating mode.

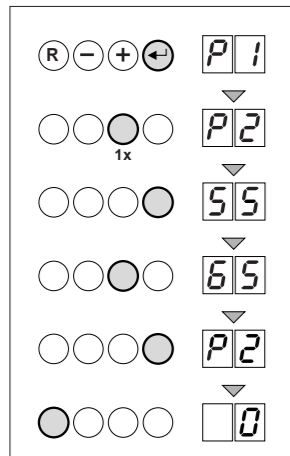


LT.NL.W6H.000.071

2. Changing P2 setting: domestic hot water temperature

Increase the domestic hot water temperature as follows:

- Press 'Enter'- key until codes P and 1 are displayed alternately.
- Press [+]-key until codes P and 2 are displayed alternately.
- Press 'Enter'- key; set value for domestic hot water temperature is displayed: 55°C (= factory setting).
- Press [+]-key to change this value, for example to 65°C.
- Press 'Enter'- key to confirm value; codes P and 2 are displayed alternately.
- Press 'Reset'- key to switch boiler to operating mode.

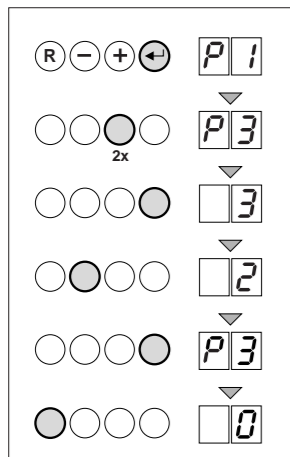


LT.NL.W6H.000.072

3. Changing P3 setting: boiler regulation (domestic hot water and central heating mode)

- 0 = CH<sub>off</sub> / DHW<sub>off</sub>
- 1 = CH<sub>on</sub> / DHW<sub>on</sub> (factory setting)
- 2 = CH<sub>on</sub> / DHW<sub>off</sub>
- 3 = CH<sub>off</sub> / DHW<sub>on</sub>

Change the boiler regulation as follows:

- Press 'Enter'- key until codes P and 1 are displayed alternately.
- Press [+]-key 2x until codes P and 3 are displayed alternately.
- Press 'Enter'-key: central heating and domestic hot water mode setting is displayed.
- Press [-] or [+]-key to change this mode, e.g. level 3 (= central heating OFF and domestic hot water ON).
- Press 'Enter'- key to confirm this mode; codes P and 3 are displayed alternately.
- Press 'Reset'- key to switch boiler to operating mode.

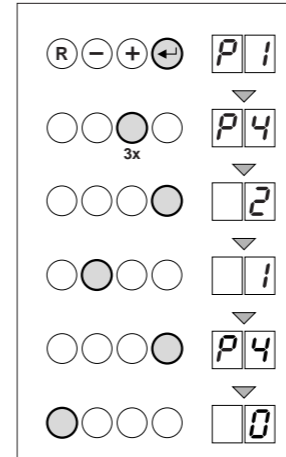

LT.NL.W6H.000.073

4. Changing P4 setting: Eco or comfort mode


No hot water

Beware; the system boiler in combination with an external calorifier will not warm up the calorifier in the Eco-mode. So, if the calorifier is empty, the tap water will be cold.

- 0 = Comfort mode
- 1 = Eco mode
- 2 = regulated by controller (= factory setting)

Change the mode as follows:

- Press 'Enter'- key until codes P and 1 are displayed alternately.
- Press [+]-key 3x until codes P and 4 are displayed alternately.
- Press 'Enter'- key; setting of 'eco or heat retention' mode is displayed (mode 2 = heat retention and regulator-dependent, factory setting).
- Press [-]-key to change this mode, for example mode 1 (=eco mode).
- Press 'Enter'- key to confirm this mode; codes P and 4 are displayed alternately.
- Press 'Reset'- key to switch boiler to operating mode.

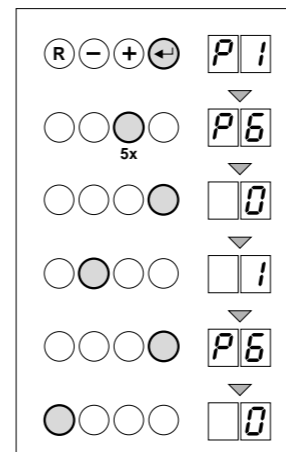



LT.NL.W6H.000.075

P6 setting: display on/off

Change the display setting as follows:

- Press 'Enter'- key until codes P and 1 are displayed alternately.
- Press [+]-key 5x until codes P and 6 are displayed alternately.
- Press 'Enter'- key; you will see mode 2 (= 'Display automatically off', factory setting).
- Press [-]-key to change this mode to mode 1 (= 'Display remains on').
- Press 'Enter'- key to confirm this mode; codes P and 6 are displayed alternately.
- Press 'Reset'- key to switch boiler to operating mode.

4 DISABLING THE BOILER

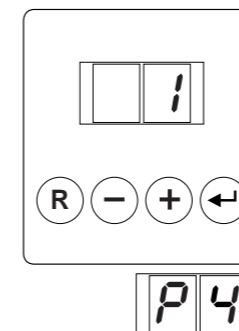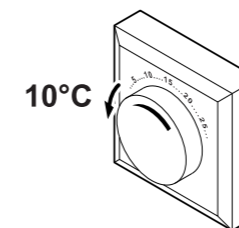

LT.AL.W7H.000.217 + LT.AL.W7H.000.218

The boiler must be disabled before any maintenance or repairs are carried out. If the central heating system is not used for a long time (during the holidays, for instance, or periods of milder weather) it is advisable to disable the boiler.

1. Disable boiler with frost protection, during longer periods of non-use

- Set the room thermostat to a low temperature, e.g. 10°C,
- Switch setting P4 to 1 (Eco mode), this will switch off the heat retention function. Now the boiler will only start working to protect itself against freezing. With an external frost protection connected, the boiler can also prevent the central heating system from freezing.