

AQUALISA

Aquatique®

Thermo

shower valve



Shower systems



Aquatique Thermo
Exposed valve

Chrome

500.10.01

Gold

500.10.04



Aquatique Thermo
Concealed valve

Chrome

500.00.01

Gold

500.00.04

Components

Exposed



Literature not shown

Concealed



Literature not shown

Important information

Introduction

The Aquatique Thermo is an antique style brass bodied thermostatic shower valve designed for built in and concealed panel mount and exposed installations.

The Aquatique Thermo provides close temperature stability and fail safe protection when installed on approved gravity or pumped systems and balanced high pressure systems. A cold inlet flow regulator is provided for use with instantaneous (multi-point) gas water heater and combination boiler applications.

Flexible and 5" and 8" drencher heads are available to complement the Aquatique Thermo valves, dependent on your water system, and should be purchased separately.

If you have any questions at any stage during installation please contact the Aqualisa customer helpline on 01959 560010 for advice.

Safety information

This product must be installed by a competent person in accordance with all relevant current Water Supply Regulations.

Flushing

Some modern fluxes can be extremely corrosive and, if left in contact, will attack the working parts of this unit. All soldering must be completed and the pipe work thoroughly flushed out in accordance with Water Supply Regulations prior to connection of the product.

Connections

The Aquatique Thermo is supplied for connection to conventional supplies with HOT on the LEFT and COLD on the RIGHT when viewed from the front. However, the valve can be adapted for use with non-conventional supplies by rotating the valve body by 180°. Please see installation instructions overleaf to reverse the valve.

The Aquatique Thermo exposed valve is supplied complete with 15mm compression elbow fittings at 198mm centres. The Aquatique Thermo concealed valve is NOT supplied with any elbow connections. Suitable 3/4" BSP union connections will be required.

Pipe work connections to this product should be cut using a rotary type cutter.

Isolating valves

Suitable isolation valves such as gate valves must be fitted to both supplies in accordance with the Water Supply Regulations and our terms of warranty. Due to their restrictive characteristics, stopcocks and ball type valves that reduce the pipe bore size must not be used on gravity or gravity pumped installations.

Filters

To ensure ongoing optimum performance the internal control mechanism 'cartridge' is protected by a two-part filter system. Debris accumulation may result in reduced flow from the shower head and noisy operation.

As this condition is not covered by our standard warranty terms, it is suggested that the cartridge be removed and the filters checked by a competent person. In the event of any difficulties please contact the Aqualisa customer helpline for assistance.



Siting

For optimum performance, with gravity fed systems the distance between the bottom of the storage cistern and the shower head should not be less than 1m (when using an adjustable shower kit). If using a fixed head, the highest point of the pipe work must be not less than 1m below the underside of the cistern. Please refer to the system layouts on page 13 of this guide.

Pump installation

UNDER NO CIRCUMSTANCES MUST A PUMP BE FITTED DIRECTLY TO THE WATER MAIN

A pump must only be used to boost the pressure from tank-fed supplies. A typical layout is shown on the reverse of this guide.

Important information

Stored water capacities

The minimum capacity of the cold storage cistern should be less than 225 litres (50 gallons). The capacity of the hot cylinder must be capable of meeting the anticipated demand.

Pressures

The Aquatique Thermo valve is designed to control static pressure up to 10 bar. Where pressures are likely to exceed 10 bar a pressure reducing valve (PRV) must be fitted into the incoming mains supply. A setting of 3 bar is recommended. It should be noted that daytime pressures approaching 8 bar can rise above the stated maximum overnight.

A suitable PRV is available from Aqualisa.

Gravity fed hot and cold supplies

Services must be installed according to good plumbing practice having regard to pipe sizing, long pipe runs and low-head situations. The cold supply for the valve assembly must be taken directly from the cold water storage system. The hot supply may be taken from the vent/draw off pipe of the hot water cylinder at a point below the cylinder connection or alternatively from the underside of the horizontal draw off.

Rising pipe work must not be connected into the horizontal draw-off from the cylinder or to any point in the vent/draw off pipe above the cylinder connection.

CYLINDER TEMPERATURE IN EXCESS OF 65°C MAY RESULT IN POOR SHOWER PERFORMANCE

To minimise pressure loss we recommend that the hot and cold supplies are run in 22mm as close as is reasonably possible to the mixing valve before reducing to 15mm.

Balanced high-pressure system

The Aquatique Thermo cartridge is designed to operate with unvented hot water storage systems up to a maximum pressure of 10 bar. A PRV must be used if either supply exceeds 10 bar. The cold water supply must be drawn from the same mains supply as that to the hot water system (down stream of the cylinder manufacturers pressure limiting valve, where supplied) and the hot supply from the nearest convenient draw-off point. Account must be taken of pressure drops that may occur when other draw-off points are used while the shower is in use. Pipe work can generally be run in 15mm.

A typical layout is shown on the page 13 of this guide.

Combination boiler/multipoint system

The gas water heater must be capable of raising the temperature of the incoming water by 35°C and delivering a flow rate of no less than 9 litres (2 gallons) per minute to the shower valve. This is sufficient to operate one outlet point at a time.

The Aqualisa Thermo cartridge is designed to operate from the mains at a maximum pressure of 10 bar. If the mains pressure exceeds 10 bar a 'drop tight' PRV must be fitted on the supply pipe after the main stopcock.

The cold supply can be taken from the nearest convenient mains supply and the hot supply can be taken from the nearest hot water draw-off point. Account must be taken of the pressure drops that will occur when other draw-off points are used while the shower is in use. Pipe work can generally be run in 15mm.

A typical layout is shown on the reverse of this guide.

Complementary shower heads

Various shower heads are available to complement the Aquatique Thermo unit, which are available separately. Please select from the following options:

Option 1. Adjustable height kit. Choose from adjustable height kit concealed or exposed (compatible with any water system).

Option 2. 5" drencher head. Choose from exposed or concealed (compatible with most water systems – the flow switch on combination boilers should be capable of passing a minimum of 12 litres per minute at 55°C. If in any doubt, please contact the appliance manufacturer before installation commences.

Option 3. 8" drencher head. Choose from exposed or concealed (compatible with high pressure or boosted systems only).

Please refer to the installation guides supplied with the shower heads for full fitting instructions.

If you have any questions regarding the specification of compatible shower heads please contact the Aqualisa customer helpline on 01959 560010 for advice

Step -by-step instructions

Exposed valve



In addition to the guide below it is essential that the written instructions overleaf are read and understood and that you have all the necessary components (shown overleaf) before commencing installation. Failure to install the product in accordance with these instructions may adversely affect the warranty terms and conditions. Do not undertake any part of this installation unless you are competent to do so. Prior to starting ensure that you are familiar with the necessary plumbing regulations required to install the product correctly and safely.



Aquatique Thermo is supplied with universal fittings.

Rear entry pipe work

1

Using the fixing template supplied, mark out the inlet supply holes.



2

Set the pipe work to emerge from the wall at right angles. The template may be used to temporarily secure the pipes at 198mm centres if required by breaking out the marking grids.

3

Make good the wall as appropriate. After making good, refit the template onto the pipes and mark the pipe cut off length (19mm-21mm).



4

Remove the mounting ring from the rear of the valve using the 2.5mm hexagonal key provided. Locate the ring inside the template ensuring the locking screw is in the 6 o'clock position and mark the four fixing holes.

5

Remove the fixing template. Using a rotary type cutter cut the inlet pipes to length and drill and prepare the fixings for the mounting ring. Fix the mounting ring to the wall using the screws provided.

6

Briefly run the hot and cold supplies to flush out any debris that may be present in the system.

7

If the valve is being installed for use with a gas fired instantaneous (multipoint) water heater or a combination boiler, the cold water flow regulator must be fitted at this stage by insertion into the cold inlet connection ensuring the small 'O' ring is facing the incoming flow, prior to connection of the elbow assemblies.

8

Carefully slide the cover plates onto the elbows to cover the compression fittings.



9

Carefully slide the dummy nuts onto the elbows ensuring damage to the plated surfaces is avoided.



10

Carefully locate the elbows into the valve inlet connections and push fully home. Using the 2.5mm hexagonal key provided, tighten the locking screw enough to retain the elbows in the connections whilst still allowing ease of movement for final adjustment.



11

Place the assembly into the mounting ring and onto the supply pipes. Tighten the locking screw to secure the assembly to the mounting ring using the 2.5mm hexagonal key provided.



12

Tighten the elbow locking screws using 2.5mm key provided. Slide the dummy nuts into position and rotate them so the locking screw is out of site before securing them using the 2.5mm key.

**13**

Tighten the inlet compression unions sufficiently to ensure a watertight seal. Push the cover plates over the unions flush to the wall surface.

Surface sited pipe work

1

Using the fixing template provided, mark out the position of the mounting ring. If required, the inlet pipe centres (198mm) may also be marked as these points extended up or down the wall as appropriate as a guide for the fixing clip location.

**2**

Remove the mounting ring from the rear of the valve using the 2.5mm hexagonal key provided. Locate the ring inside the pre marked position, ensuring the locking screw is in the 6 o'clock position and mark the four fixing holes.

**3**

Drill and prepare the fixings for the mounting ring. Fix the mounting ring to the wall using the screws provided.

**4**

Follow steps 6 to 13 listed above.

Concealed valve



In addition to the guide below it is essential that the written instructions overleaf are read and understood and that you have all the necessary components (shown overleaf) before commencing installation. Failure to install the product in accordance with these instructions may adversely affect the warranty terms and conditions. Do not undertake any part of this installation unless you are competent to do so. Prior to starting ensure that you are familiar with the necessary plumbing regulations required to install the product correctly and safely.



Aquatique Thermo is supplied with universal fittings.

Elbow connections are not supplied with concealed models; suitable $\frac{3}{4}$ " BSP unions are required.

1

If installing the product built in to a solid wall, chase out a suitable recess in the wall to receive the valve and pipe work. If installing the valve in a concealed panel mounted situation, in most cases it will be necessary to first install a suitable sound fixing in the cavity area before fixing the valve.

A hole of $\text{\O}130\text{mm}$ is required to install the valve and gain access to inlet and outlet connectors.



Minimum mounting depth 68mm, maximum depth 82mm, measured from mounting surface to finished/tiled wall surface.



2

Set the temperature lever to the vertical position, undo the four screws and remove the temperature lever and on/off control assembly.



3

Remove the mounting ring from the shower valve using the 2.5mm key provided.

4

Position the mounting ring in the chase or suitable sound fixing surface. Ensure the locking screw is in the 6 o'clock position and mark the four fixing holes. Prepare the holes and secure the mounting plate to the wall using the fixings provided.



5

Insert the valve into the mounting ring and tighten the locking screw using the 2.5mm key provided.



6

If the valve is being installed for use with a gas fired instantaneous (multipoint) water heater or a combination boiler, the cold water flow regulator must be fitted at this stage by insertion into the cold inlet connection ensuring the small 'O' ring is facing the incoming flow, prior to connection of the elbow unions.

7

Using suitable 3/4" BSP unions, connect the inlet and outlet pipes.

9

Fill in the chase ensuring the valve body elbows and outlet are not cemented into the wall. Suitable non-setting infill material such as paper, polystyrene etc. should be wrapped around the components and a plaster finish applied.

!

Aqualisa reserves the right to revoke the terms of the warranty should access to service connections be denied by the use of solid setting infill material.

10

Using a silicone based lubricant or liquid soap, lubricate the wall plate grommet and push onto the valve flush with the wall surface. A thin bead of silicone based sealant may be required to seal the wall plate to the wall surface.



11

Fit the temperature lever and on/off control assembly to the valve body with the lever in a vertical position and the on/off control horizontal. Secure the assembly to the valve body with the four screws, hand tight only.



After installation...

Reversed supplies

The Aquatique Thermo is designed for conventional supplies with HOT on the Left and COLD on the Right as viewed from the front. However, the Aquatique Thermo can be adapted for use with reversed supplies, adopting the following procedure.

- 1 Set the temperature lever to the vertical position and remove the temperature screws and temperature lever/on/off assembly.
- 2 Remove the elbow connections and loosen the locking screw in the bottom of the valve base plate. Rotate the valve body 180° and tighten the locking screw in the valve base plate.
- 3 Unscrew and remove outlet connector using a 12mm hexagonal key or radiator key and remove the outlet plug using a snug fitting screwdriver taking care to avoid any damage to the plated surfaces.
- 4 Reposition and refit the outlet and outlet plug as required.
- 5 Refit the elbow connections.
- 6 Replace the temperature lever/on/off assembly ensuring the temperature lever is in the vertical position. Secure the assembly to the valve body with the four screws, hand tight only.

Temperature Limiting Device

For additional safety, for example when the very young or elderly people will be using the shower, the Aquatique Thermo incorporates a temperature limiting device enabling you to set minimum and maximum temperature adjustment if required. Temperature adjustment is limited by inserting the limiting pins provided into the small holes in the face of the cartridge.

The pins are fitted as follows:

- 1 Ensure the temperature lever is set to the vertical position.
- 2 Remove the four temperature control lever fixing screws and detach the lever and on/off control.
- 3 Replace two of the screws in the top and bottom threaded holes of the temperature ring.
- 4 To set the MAXIMUM temperature, insert a limit pin into the mid-position hole in the upper set of holes.
- 5 Using the two screws in the cartridge face as a lever, turn the temperature control ring clockwise until a stop is reached.
- 6 Temporarily replace the on/off control and temperature control lever and turn the valve on to check the temperature is at the desired maximum temperature. If not, turn the valve off, re-position the pin in a higher hole and turn on the valve to check the temperature is sufficient. Repeat the procedure as necessary.
- 7 If a minimum temperature is required, use the lower set of holes in the cartridge face and repeat the above procedure. If no minimum temperature is required, do not position any pins in the lower set of holes
- 8 Snap off the pins by levering outwards. Turn the temperature control ring to the vertical position and remove the two fixings screws. Replace the temperature control lever and on/off control assembly in its original position and fix with the four temperature screws, hand tight only.

User guide

Shower operation

Shower operation

Turn the on/off control fully anti-clockwise into the open position to turn the shower on.

Rotate the temperature control lever to select a comfortable showering temperature using the temperature markings as a guide.

Turn the on/off control fully clockwise into the closed position after use.

After installation

Run through the valve operation with the purchaser and hand them this guide.

Complete and post the Aquatique Thermo guarantee card or register online at www.aqualisa.co.uk.

Cleaning

Your Aquatique Thermo shower valve should be cleaned using only a soft cloth and washing up liquid.


DO NOT USE ABRASIVE CLEANERS.

Trouble shooting guide


Symptom	Possible cause	Action
Water output is either all hot or all cold	Reversed inlet supplies	Check that the supplies correspond with the inlet markings
Water output is not hot enough	The temperature of the hot water cylinder is too low	The cylinder temperature should be at least 15°C hotter than the blend
	Water flow through the hot water appliance is too fast	Check the flow rate recommendations with the heater manufacturer
Flow rate is poor and water temperature is low	Airlock in the hot water supply	Check that the pipe work is laid out in accordance with correct practices, paying particular attention to potential air-traps
Water temperature swings regularly between hot and cold	Cold water pressure is too high	If the static water pressure exceeds 7 bar, install a pressure reducing valve (PRV) in accordance with the installation guide
	The flow regulator has not been fitted	Fit the flow regulator
Poor flow rate	Twisted hose Debris in shower head Debris in filters Debris in cold inlet flow regulator	Check for debris and clear as necessary

Typical installations


Typical gravity system installation

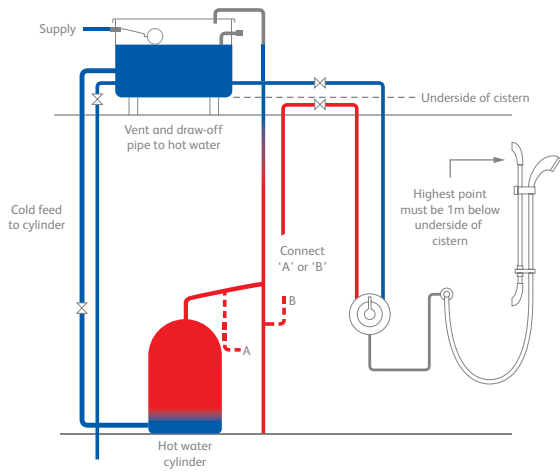


Typical Thermal storage unit system installation

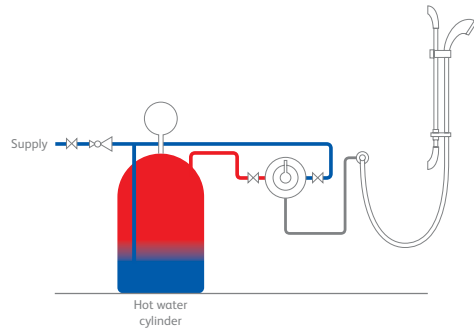


Typical pumped system installation

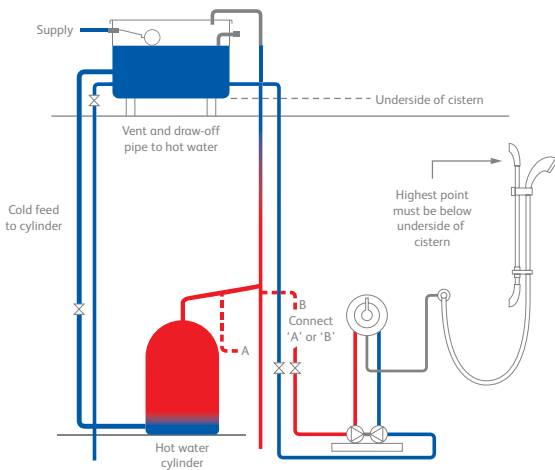

Typical UHW system installation

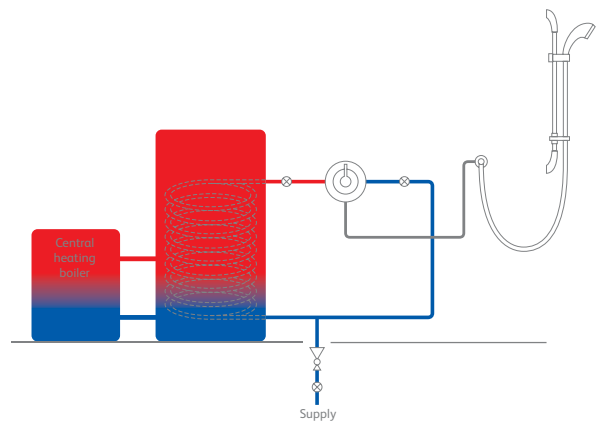

Typical combination boiler installation

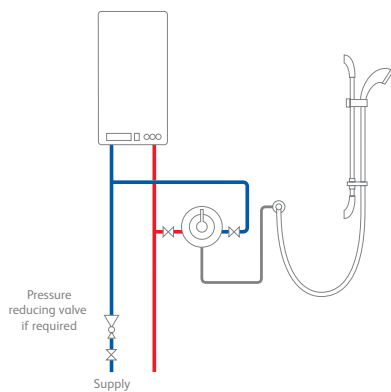



AQUALISA

Aqualisa Products Limited
The Flyer's Way
Westerham Kent TN16 1DE

Sales enquiries: 01959 560010

Republic of Ireland 01-864-3363

Customer helpline: 01959 560010

Republic of Ireland 01-844-3212

Brochure Hotline: 0800 652 3669

Website: www.aqualisa.co.uk

Email: enquiries@aqualisa.co.uk



Please note that calls may be recorded for training and quality purposes

The company reserves the right to alter, change or modify the product specifications without prior warning

© Registered Trademark Aqualisa Products Limited